

Benito™

250W ELECTRIC CHOPPER

• Fast • Powerful • Convenient

BLACK

WHITE

RED

SILVER



Smart Kitchen Appliances

THANK YOU

FOR CHOOSING BENITO

Crafted for Modern Indian Kitchens

Welcome to the Benito family. We're delighted to be a part of your kitchen and everyday cooking experience.

Your Benito Chopper is thoughtfully designed to deliver powerful performance, reliable durability, and effortless convenience helping

Built to match the pace of Indian cooking, Benito combines efficiency, style, and everyday practicality to make your kitchen tasks faster, smoother, and more enjoyable.

Here's to creating flavourful moments, every single day the Benito way.

Happy Cooking!

WARRANTY CARD

The Electric Chopper has 1 Year Warranty from the date of the purchase, against defect due to faulty workmanship or material in manufacturing of this product. The warranty automatically stands cancelled if machine is opened or tampered with by any unauthorised person. The warranty is invalid if the product is misused in any way or not handled in accordance with the operating instruction issued by company and or arise in transit. The warranty card must be complete in all respects. All claims must be accompanied by warranty card and should be made to the authorised Dealer Distributors. The motor will be serviced for free within the warranty period on the verge of manufacturing defects only, mishandling or tampering with the same will be charged

Not covered in warranty terms

All the plastic, steel and rubber components like Plastic caps, Body, Cord wire, Knob, Coupler, Handles, Jumbo Base Gasket, Spindle, Bush and all other parts are subject to wear and tear hence shall not be covered under warranty.

Sr. No _____ Tested by _____ Remarks _____

Purchase's Name & Address : _____

Date of Purchase _____ Cash Memo No. _____

IMPORTANT

Safety Instructions

Please read all instructions carefully before using the appliance.

- Keep the appliance away from water and direct heat.
- Do not touch blades directly with bare hands.
- Ensure the lid is locked properly before operation.
- Keep appliance away from children.
- Unplug appliance before cleaning.
- Do not operate continuously for long durations.
- Use only for food chopping purposes.
- Do not immerse motor unit in water.

Safety Reminder

Always operate the chopper on a flat and stable surface.

Design Style :

- Warning icons
- Light grey background sections
- Premium red highlight accents for caution notes

ELECTRIC MINI FOOD CHOPPER

FEATURE HIGHLIGHTS



Powerful
250W Motor



Stainless
Steel Blades



Quick to Clean



One-Touch
Operation



Compact &
Easy to Store



Multipurpose
Chopping

HOW TO USE

Operating Instructions

1 Assemble the Chopper



Place the blade inside the bowl carefully.

2 Add Ingredients



Cut ingredients into small pieces before placing them into the bowl.

3 Close the Lid



Ensure the lid is properly locked before operation.

4 Attach Motor Unit



Place the motor unit securely on top.

5 Start Chopping



Press the top button gently to begin chopping.

6 Stop Operation



Release the button once desired consistency is achieved.

PRODUCT SPECIFICATIONS

SpecificationDetails

TECHNICAL DATA

Rated Voltage: 230V, 50Hz, AC Onl

Input: 250W

FREQUENCY: 50/60Hz

Motor: Universal Motor 250 Watts

Motor Housing: High Quality ABS Plastic

CONTENTS:

1 High Torque Motor Unit

1 500ML PC Bowl

1 Chopper S.S. Blade

1 Whisking Blade

1 Instruction Manual With Warranty Card

Useful Tips

- Use pulse operation for better texture control
- Allow cooling breaks after extended use.
- Avoid overfilling the bowl
- Clean immediately after use.

DO'S

READ INSTRUCTIONS CAREFULLY.

Check the Blades: Rotate the inner blade assembly by hand before placing it into the bowl to ensure it spins smoothly and freely.

Secure the Bowl: Ensure the processing bowl is properly locked onto the motor base before plugging in the appliance.

Pulse with Care: Use short, controlled pulses for even chopping and to prevent over-processing your ingredients.

Handle with Caution: Always handle the chopping blades by the central plastic hub. The stainless steel blades are extremely sharp—never touch the cutting edges directly.

Keep Cool: Place your chopper on a flat, stable surface away from direct sunlight, stovetops, or other heat sources.

Safety First: Always disconnect the appliance from the power supply before removing ingredients, changing attachments, or cleaning.

Authorized Service: If the chopper malfunctions, do not attempt to fix it yourself. Take it to an authorized service center along with your warranty card.

DON'T'S

READ INSTRUCTIONS CAREFULLY.

Do not run the chopper unless the bowl, blades, and splash guard cover are perfectly positioned and locked into place.

Do not allow children to handle or operate the chopper. Never leave the sharp blade assembly exposed or detached outside of the bowl.

Do not overload the processing bowl with quantities heavier or larger than specified in the instruction manual, as this can strain the motor.

Do not leave the chopper unattended while plugged in. Avoid running the motor continuously for extended periods; use quick, controlled pulses instead.

Do not use your bare hands to clear out food stuck to the blades or inside the bowl. Always use a spatula or cleaning brush to protect your fingers from the sharp edges.

Do not attempt to repair the chopper at home or allow unauthorized, inexperienced persons to service it. Take it directly to an authorized dealer.