

Benito™

Monza

- Multi Functional System
- High Torque Motor
- 3 Stainless Steel jars
- Compact Space Saving Design



THANK YOU

FOR CHOOSING BENITO

Crafted for Modern Indian Kitchens

Welcome to the Benito family. We're delighted to be a part of your kitchen and everyday cooking experience.

Your Benito Mixer Grinder is thoughtfully designed to deliver powerful performance, reliable durability, and effortless convenience helping you prepare everything from fresh chutneys and aromatic masala to smooth batters and delicious blends with ease.

Built to match the pace of Indian cooking, Benito combines efficiency, style, and everyday practicality to make your kitchen tasks faster, smoother, and more enjoyable.

Here's to creating flavourful moments, every single day
the Benito way.

WARRANTY CARD

The Mixer-Grinder has 12 Months Warranty from the date of the purchase, against defect due to faulty workmanship or material in manufacturing of this product. The warranty automatically stands cancelled if machine is opened or tampered with by any unauthorised person. The warranty is invalid if the product is misused in any way or not handled in accordance with the operating instruction issued by company and or arise in transit. The warranty card must be complete in all respects. All claims must be accompanied by warranty card and should be made to the authorised Dealer Distributors. The motor will be serviced for free within the warranty period on the verge of manufacturing defects only, mishandling or tampering with the same will be charged.

Not covered in warranty terms.

All the plastic, steel and rubber components like Plastic caps, Body, Cord wire, Knob, Coupler, Handles, Jumbo Base Gasket, Spindle, Bush and all other parts are subject to wear and tear hence shall not be covered under warranty.

Sr. No _____ Tested by _____ Remarks _____

Purchase's Name & Address : _____

Date of Purchase _____ Cash Memo No _____



TECHNICAL DATA

Rated Voltage: 230V, 50Hz, AC Only

Input: 750W

RPM: Approx 18000 (No Load)

Rated Inter. Operation : 1 Min on / 5 Min Off

Insulation Class: "H"

Motor: Universal Motor 750 Watts

Motor Housing: High Quality ABS Plastic

Blades: Stainless Steel

CONTENTS:

1 HIGH TORQUE MOTOR UNIT

1 TALL 1.5L SS JAR

1 MEDIUM 1.2L SS JAR

1 SHORT 400ML SS JAR

1 INSTRUCTION MANUAL WITH
WARRANTY CARD

HOW TO USE THE MIXER GRINDER

- 1.** Place the mixer on a flat, dry, and stable surface at a comfortable height.
- 2.** Plug the mixer into a 3-pin power socket. Make sure the speed knob is in the off position before switching on the power.
- 3.** Fix the required blade inside the jar according to your use.
- 4.** Place the jar properly on the mixer base. Ensure the locking wedge at the bottom of the jar fits correctly into the groove so the jar locks securely and does not rotate.
- 5.** Add the ingredients into the jar and close the lid firmly. (For best results, fill the jar up to 75% only.)
- 6.** Switch on the mixer and choose the required speed. Speed 1 – For wet grinding, Speed 2 – For wet and dry grinding & Speed 3 – For dry grinding. The motor runs only when the knob is rotated.
- 7.** After use, turn the speed knob back to the OFF position.
- 8.** Check the contents in the jar. Repeat the process if needed until you get the desired result.

How to Fix the Jar

1. This mixer comes with three different attachments jars.
2. Each jar has a locking wedge at the bottom.
3. Place the jar on top of the mixer unit carefully.
4. Make sure the lock at the bottom of the jar fits properly into the slot on the mixer unit.
5. Turn the jar clockwise until it locks firmly in place.
6. Close the jar with the lid Properly.
7. For liquid jars, make sure the rubber gasket is fitted correctly around the lid before closing the jar.

Overload Motor Protector

This mixer grinder has a safety feature called an Overload Protector to protect the motor from damage when there is too much load. The overload button is placed at the bottom of the mixer. If the mixer is overloaded, it will automatically stop working to protect the motor. If this happens

1. Switch off the mixer.
2. Wait for 1 minute so the motor can cool down.
3. Remove the extra load or hard ingredients causing the problem.
4. Press the small reset button (pin-rod) at the bottom of the mixer by hand.
5. Start the mixer again.

How to Fix the Blades

1. Check that the blade fits properly on the jar shaft.
2. Hold the bottom coupler of the jar with your left hand.
3. Place the blade on the shaft using your right hand.
4. Use the spatula/spanner to gently turn the blade in the anticlockwise (left) direction until it locks properly.
5. Do not tighten too much, otherwise the rubber coupler below the jar may come loose. If the coupler comes out:
 - (a) Fix the fibre washer first.
 - (b) Then place the spring.
 - (c) Finally screw the rubber coupler back in the anticlockwise direction

Cleaning After Use

1. Fill the stainless steel jar with 1/3 water.
2. Add 1 spoon of detergent.
3. Run the mixer for a few seconds at Speed 1.
4. Empty the jar and repeat this process two times.
5. Remove the jar from the mixer.
6. Unscrew the blade using the spatula/spanner and wash it under running water.
7. Wipe the jar and blades with a soft clean cloth and dry them properly to remove any smell and keep them ready for next use.

Important: Do not keep the jar attached to the mixer when not in use. Never put the motor unit or the bottom of the jars in water or any liquid.



DO'S

READ INSTRUCTIONS CAREFULLY.

- Rotate the motor shaft by hand through the coupler to ensure that it works smoothly.
- After connecting, run machine at speed 1 for a few seconds to ensure that the motor works properly. Before fixing the stainless steel jar on the base, rotate jar shaft by hand to make sure that it rotates freely. Place your Mixer Grinder away from sun and heat.
- Hold the jar gently by hand while the machine is in operation. Always use spatula while fixing or removing blades. Blades are sharp, so avoid rubbing it with hands. In dry grinding, the friction may heat up the jar. It has nothing to do with the motor. So do not worry.
- Ensure to disconnect from power supply before taking of parts and before cleaning.
- If Mixer-Grinder does not work properly, take it to a authorised dealer, along with guarantee card.

DON'T'S

READ INSTRUCTIONS CAREFULLY.

- Do not run machine, unless the jar is in perfect position, Lids too should be firmly placed. Hold the jar gently by hand.
- Do not allow children to handle Mixer-Grinder. Blades should not be left inside the jars.
- Do not burden motor with loads heavier than specified in manufacture's instruction.
- Do not leave Mixer Grinder carelessly when switched on. Never lay any thin plastic sheet or cloth under the basic unit. It may get struck up and block the ventilation hole in the base.
- Do not use hands for filling or cleaning the jars or blades. It is more convenient to use Spatula.
- Do not attempt to repair at home or allow unauthorised inexperienced person to do it either. Take it to authorised dealer.